

Changing the User Password

The following instructions will change the password in an external Hard Drive with hardware encryption.

1. Enter User Mode
 - a. Attach the Secure Hard Drive to your computer. It enters the Standby Mode.
 - b. Enter the User Password or the Admin Password and press . The indicator light turns **GREEN** indicating that the drive is in the User Mode. If the indicator light flashes **RED**, you need to re-enter the correct password.
2. Press and hold  and the number 1 at the same time until the indicator light flashed **RED**.
3. Enter your old password and press . The indicator light will turn **GREEN**, then change to flashing **BLUE**.
4. Enter the new password and press  (The Password must be a minimum of 6 digits and a maximum of 16 digits). The indicator light will flash GREEN three times.
5. Re-enter the new User Password and press . The indicator light stays solid **GREEN** indicating that the User Password has been changed successfully.